 

SLAB MOVEMENT DETECTION DEVICE



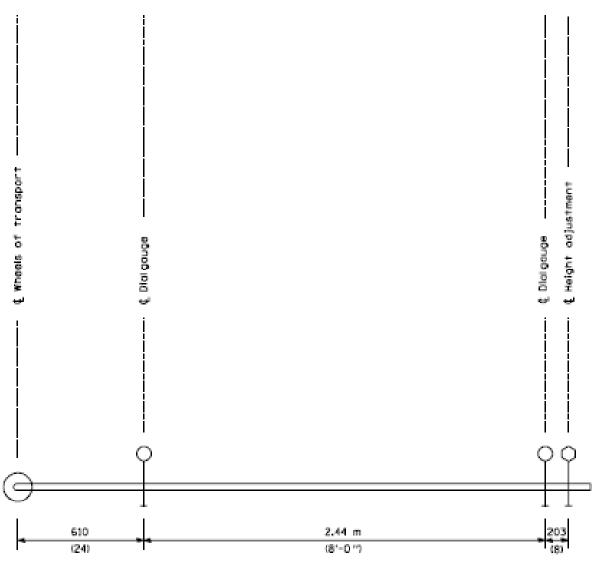

ELEVATION

GENERAL NOTES

- 1. Dial gauges should be spring loaded in order to measure both extension and compression.
- 2. All dimensions are in millimeters (inches) unless otherwise shown.