



AXON BODY 3

TRAINING



COURSE OUTLINE

BPD POLICY 824 REQUIREMENTS

AXON BODY 3 (AB3) OVERVIEW


OPERATING FUNCTIONS

MOUNTS

AXON VIEW & PAIRING



BPD Policy 824

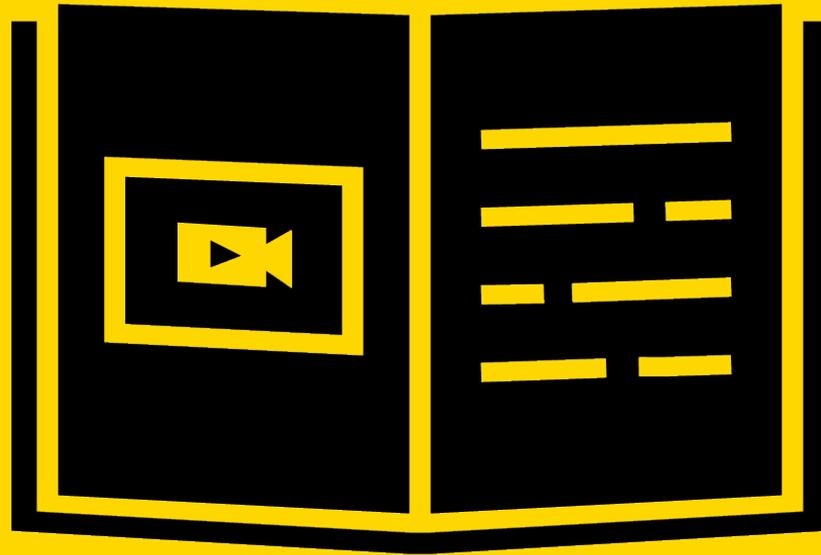

CAMERA UTILIZATION

- Members* are required to wear the camera at all times while on-duty, and must power the camera ON at the initiation of their tour.
- The camera must remain in the Powered ON state for the entire tour of duty.

**members assigned to Vice or Undercover are exempt while operating undercover. Arrest team members assigned to these units shall wear their BWC in accordance with policy.*

TASK FORCE OFFICERS

- Members deputized as TFOs are exempt from wearing a BWC while conducting task force operations or investigations.
- Members assigned to support federal agents who are on-scene assisting an operation involving federal agents (ATF, FBI, DEA, etc.) are exempt from wearing the BWC while fulfilling those obligations.
 - *Obtain permission from a supervisor and memorialize your assignment and reason for not utilizing the BWC into the BWC prior to assisting a federal law enforcement partner.*

RECORD... AND KEEP RECORDING

- Start recording (10-61)
 - Immediately upon receipt or response to any in-progress call
 - While driving in emergency response mode or transporting a detainee
 - **BEFORE** arrival at a call for service
 - **BEFORE** collecting evidence
 - **BEFORE** responding CODE 1
 - **BEFORE** a confrontational encounter
 - If a voluntary encounter becomes a field interview or investigative stop, activate the camera as soon as you develop reasonable suspicion for a stop.
- **Do NOT start and stop recordings repeatedly during one incident. Only stop once you have left the scene entirely and have no more citizen interaction.**

NOTIFICATION OF RECORDING

- Members will inform subjects that they are being recorded unless it is

UNSAFE

IMPRACTICAL

IMPOSSIBLE

to do so.

LATE ACTIVATIONS

- IF ACTIVATING LATE
 - When practical, give a brief verbal narrative on camera, to inform those who may watch the video later, of what happened prior to activation.
 - **NEVER RE-ENACT or RE-CREATE: you will face disciplinary action.**

PUBLIC COMPLAINTS

- Members involved in an incident that triggers a duty to:
 - Receive or assist in the taking of a public complaint against a member
 - Notify their supervisor or PIB of actual or alleged member misconduct

May not review any BWC recordings related to the incident prior to completing required reports about the allegations and/or being interviewed.

- EXCEPTIONS:
 - Member has written notice from PIB that they will not be required to submit a statement
 - The recording is viewed at PIB or at a location approved by a PIB official in the presence of an assigned investigator or designee

PROPER TITLES

Upload all BWC data by the conclusion of your tour of duty.

• TITLING PRIORITY

- 1 – REPORT NUMBER
- 2 – CITIATION NUMBER
- 3 – LOCATION

Never use special characters in titles
?/&%_\$_-#@*()\";:

PROPER TITLES

GOOD TITLE EXAMPLES

- 4150712345

(Complete Report Number with no spaces or special characters)

- 2FQ1234

(Complete Citation Number with no spaces or special characters)

- 3500 W. Northern Pkwy.

(Complete address where the recording was taken. CHECK YOUR SPELLING)

BAD TITLE EXAMPLES

- 4-15-0712345

- 15712345

- Norther Prkwy

- Field Interview

- Car stop

ARREST CATEGORY

- The ARREST category **MUST** be used to designate a recording as Evidence potentially needed for court or by an ASA.

- **EXAMPLES:**

- Any and all Arrest Recordings
- Must Appear Citations
- Criminal Citations

MALFUNCTIONS


Policy 824:

Members issued a BWC shall not perform enforcement related functions if their BWC is not functioning due to a critically low battery or any other malfunction.

Reminder:

Members may obtain replacement BWC's 24/7 at Headquarters Evidence Control


OVERVIEW

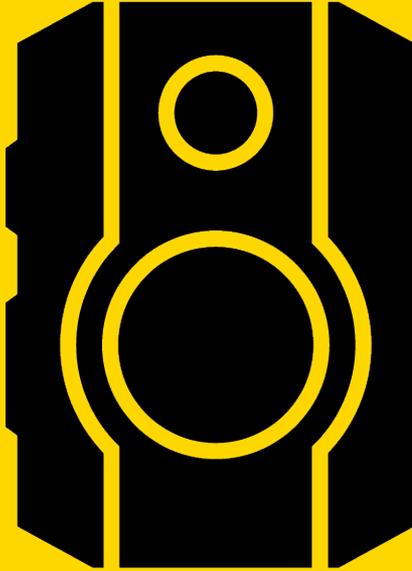

AXON BODY 3

AB3 OVERVIEW

- 12+ hour battery life under normal use
- 146° diagonal field of view camera lens
- IP67 rating
- Embedded GPS
- LTE Connectivity
- LCD Display
- Live Streaming Ability ^{*}(while recording)
- Uses Existing Mounting Options

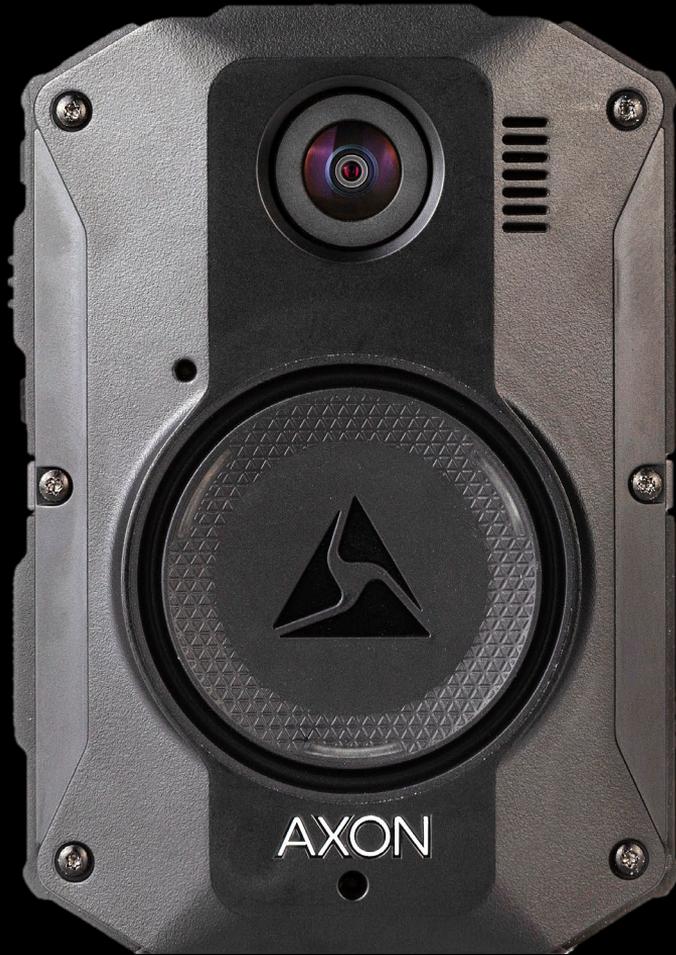



AB3 | COMPONENTS



AB3 | COMPONENTS




Operation LED

Camera Battery



AB3 | COMPONENTS

OPERATING THE AB3

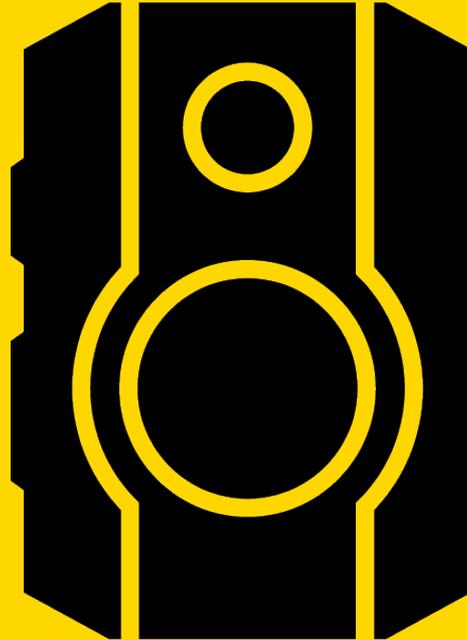

BUFFERING MODE

WHILE CAMERA IS POWERED ON



The Buffering Mode has no audio



*While buffering, the **Operation LED** will blink green (if enabled)

RECORDING VIDEO



To start a recording,
double press the
Event Button



*While recording, the AB3 will beep and vibrate every two minutes. The **Operation LED** will blink red and a **camera icon** will be displayed on the LCD, to remind user it is recording.

RECORDING VIDEO



To end a recording, hold the
Event Button
for approximately 3 seconds



AXON AWARE & AWARE +



AXON AWARE



Axon Aware is Axon's new real-time situational awareness technology


- The AB3 is connected to LTE – similar to a cell phone – and can livestream to Axon Evidence instantaneously to authorized users when the AB3 is recording.

- When a livestream is started, the AB3 wearer is notified through an icon display, audio prompt, haptic feedback, and Operation LED color change (if enabled by the wearer)



*Livestreaming is only available while the AB3 is in Record Mode

AB3 DISPLAY

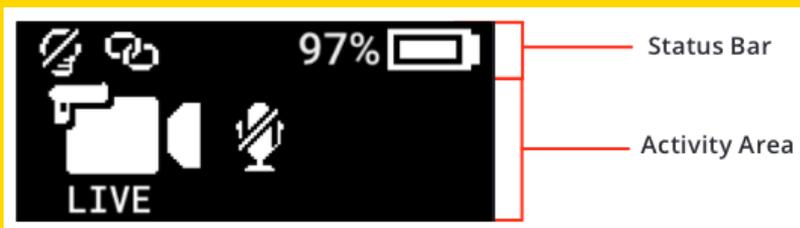

Status Bar Icons in the field	Description
58%	Battery capacity
	Camera paired
	Lights off
S	Stealth mode on
!	Battery low warning (appears at the right of battery capacity)

Activity Area Icon	Description
READY	Ready (buffering) mode
	Recording
	Recording started by Axon Signal
	Axon Aware Live Streaming
	Recording started by gunshot detection
	Microphone off

AB3 DISPLAY & NOTIFICATIONS

Operating Mode or Action	Camera Display (Activity Area)	Operation LED	Audio Notification	Haptic Notification (Vibration)
Power on	 then READY	Solid red	Two short rising-pitch tones	One - long duration
Power off		Solid red	Three short lowering-pitch tones	One - long duration
Recording started by Event button double-press	STARTING then 	Blinking red	Two short tones	Two - short duration
Recording started by Axon Signal		Blinking red	Two short tones	Two - short duration
Recording started by gunshot detection		Blinking red	Two short tones	Two - short duration
Recording reminder		Blinking red	Two short tones every 2 minutes	Two - short duration every 2 minutes
Stop recording, return to Ready	SAVING then READY	Blinking green	One long tone	One - long duration
Volume up or down		Blinking green or red	One short tone at new volume level	One - short duration
Connected for Axon Aware Live Streaming	 LIVE	Blinking purple	Three short rising-pitch tones	One - long duration
Enter or Exit Mute mode (microphone off)		Blinking blue in Mute mode	One short tone	Two - long duration
Enter Stealth mode	STEALTH	Off	None	None
Exit Stealth mode	No change	Blinking green or red	None	Two - short duration
Event marker captured		Blinking red	None	One - short duration
Low battery notifications: 20% battery capacity and every 5% decrease OR any error	BATTERY LOW	Blinking yellow	Four quick high-pitch tones	Four - short duration
Camera enters Pairing mode	PAIRING	Blinking blue	Three short rising-pitch tones	None

SPEAKER VOLUME



Increase Speaker Volume:
Press Volume Up Button

Decrease Speaker Volume:
Press Volume Down Button

OTHER OPERATING MODES



Activate Lights On or Off:

Press and hold Volume Up button for 3 seconds

Activate Display Backlight:

Double Press Select Button (Backlight activates for 2 seconds)

BUTTON ACTION RECAP

Action	Button Actions
Power On	Press Power button until short vibration. Camera starts and enters Ready (Buffering) mode.
Power Off	Press and hold Power button for 3 seconds.
Start Recording	Double-press Event button
End Recording	Press and hold Event button for 3 seconds
Add Marker	While recording, press Select button
Increase speaker volume	Press Volume ▲ button
Decrease speaker volume	Press Volume ▼ button
Turn on or off lights	Press and hold Volume ▲ button for 3 seconds
Enter Stealth mode	Press and hold Volume ▼ button for 3 seconds
Exit Stealth mode	Press and hold Volume ▲ or Volume ▼ button for 3 seconds*
Enter or exit Mute mode	While recording, press and hold Select button for 3 seconds
Activate display backlight	Double-press Select button. Display backlight is on for 2 seconds.
Pairing	Simultaneously press the Event and Program buttons and then release

* The camera remembers the previous volume and light settings when exiting Stealth mode.


LIVE MAP BUBBLES




Camera Markers

	Camera recording, available for livestream. Light blue color indicates location was last updated more than 5 minutes ago.
	Camera not recording. This is last location update when camera stopped recording. This marker is removed after 4 hours.
	Multiple cameras, indicated by number, at location. Click or manually zoom in to see individual camera markers.
	Approximate camera location as reported by GPS. The camera is in the circle, but not necessarily in the center. Shown when Recording List location is clicked.
	Alert associated with camera. Alert status is removed after 8 hours.

MOUNTS

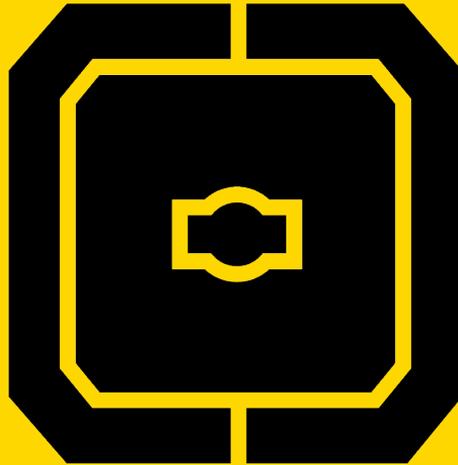

MOUNTS

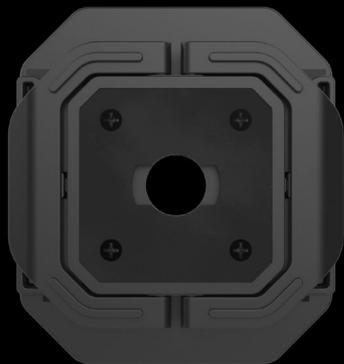

Wing Clip Mount



Large Pocket Mount



Small Pocket Mount


MOUNTS



**Heavy Outer-Wear
Magnet**



Flexible Mount

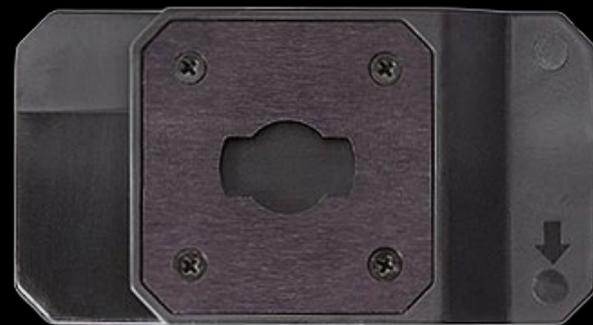

Z-Bracket Mount

MOUNTS



Double MOLLE




Single MOLLE




Clip Mount

AXON VIEW

MOBILE APP

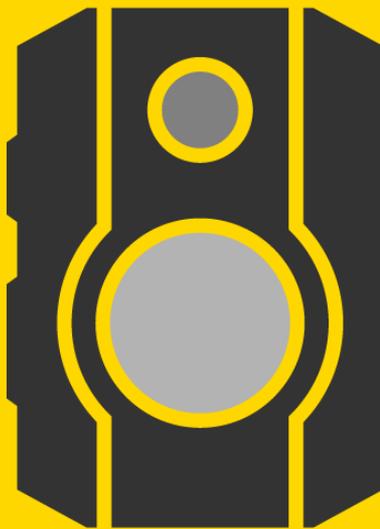

PROVIDES THE FOLLOWING CAPABILITIES

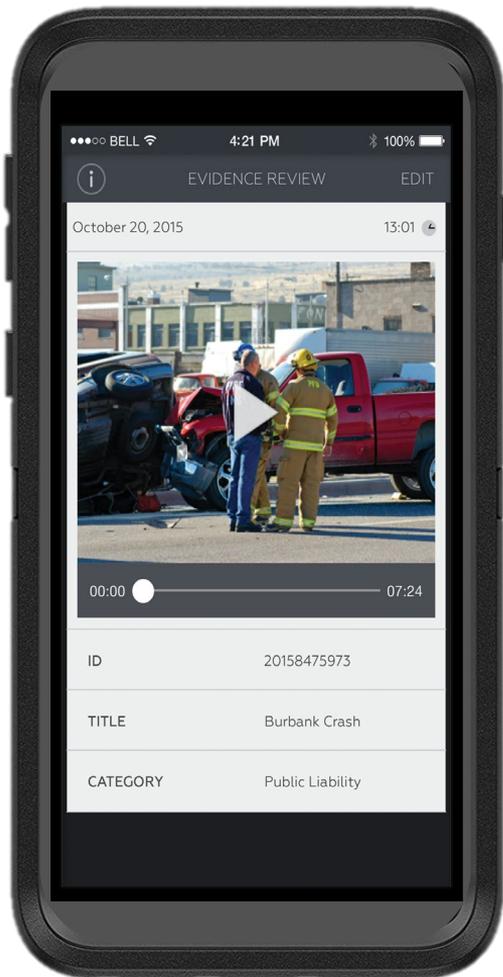

- Pairs AB3 with Android or iOS devices
- Instant replay
- Live video streaming assists with optimal camera placement
- Title and Categorize recordings prior to upload
- Adjust AB3 settings


PAIRING YOUR AB3




Step 1




Step 2

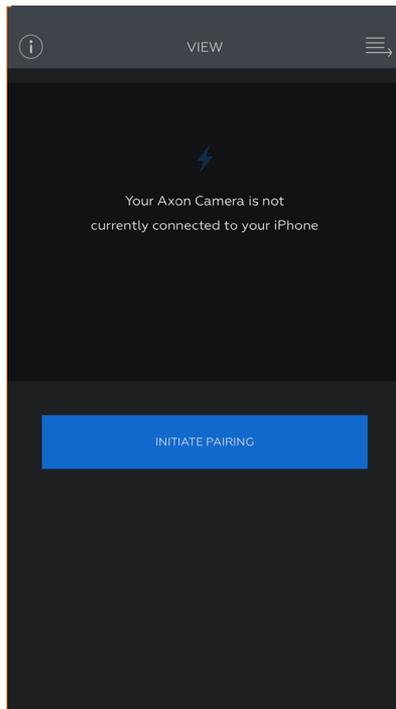

Step 3

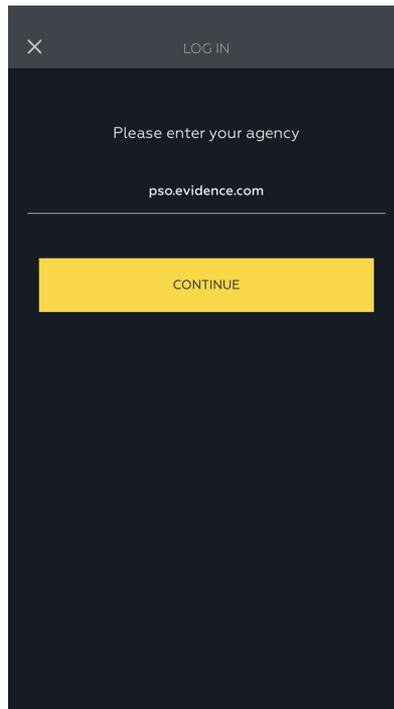

Step 4

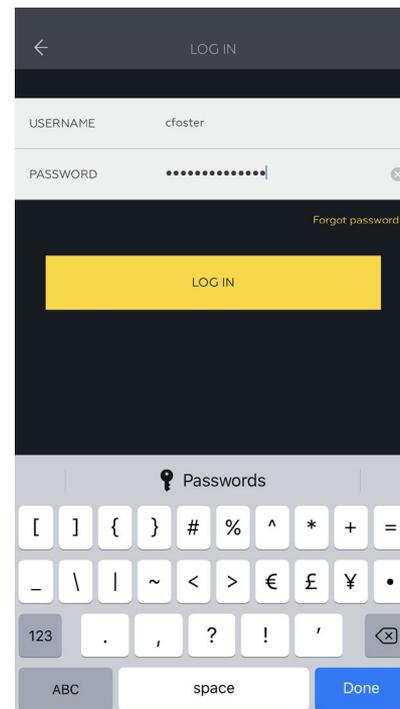

SELECT BODY 3 → TAP INITIATE PAIRING → ENTER AGENCY → ENTER PERSONAL ID



PAIRING YOUR AB3

Step 5




1. Power on the AB3
2. Press the Program AND Event button at the same time to place the AB3 into Pairing mode
3. The Operation and Triad LED, if enabled, will blink blue and the LCD Display will display "PAIRING"



PAIRING YOUR AB3

Step 6

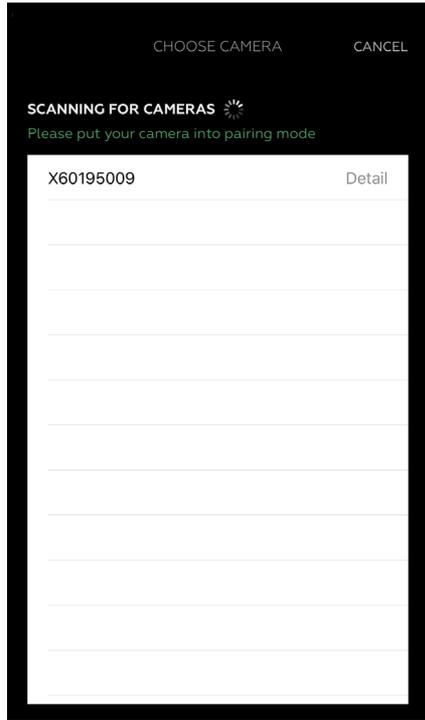


SCAN FOR CAMERAS

Step 7



MATCH AB3 SERIAL #
TO AXON VIEW

Step 8

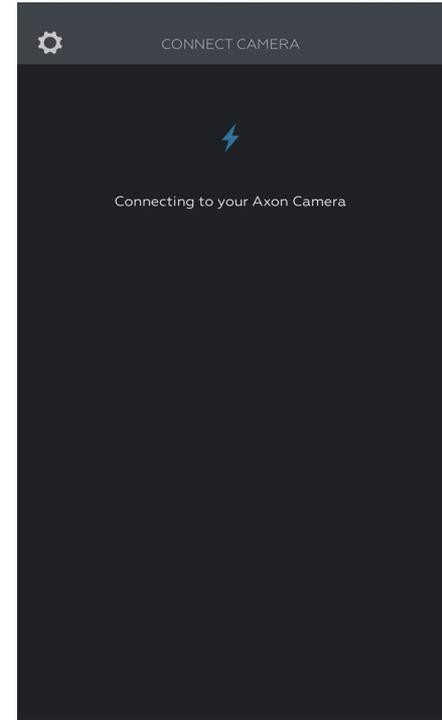


CONNECT

USING AXON VIEW - METADATA




Step 1

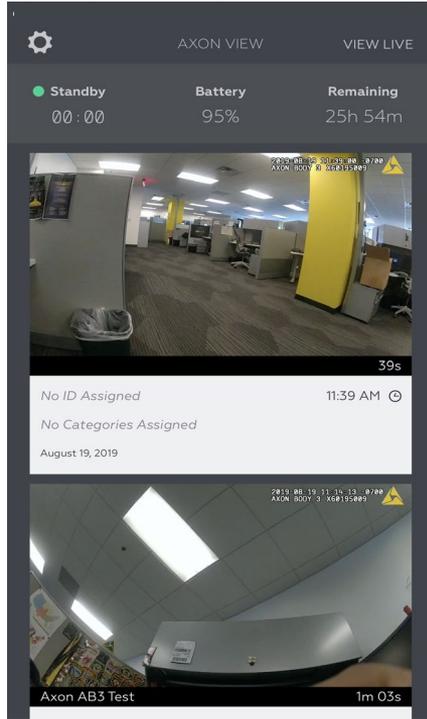


ENTER EVIDENCE LIST

Step 2

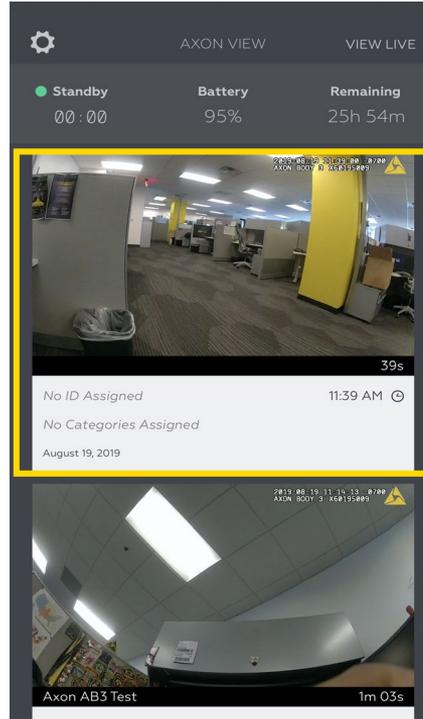

TAP ON THUMBNAIL


Step 3

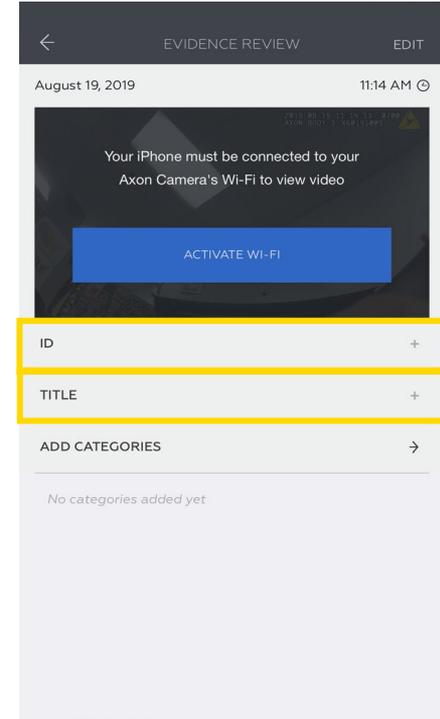

ADD TITLE + ID



AXON VIEW – AB3 SETTINGS

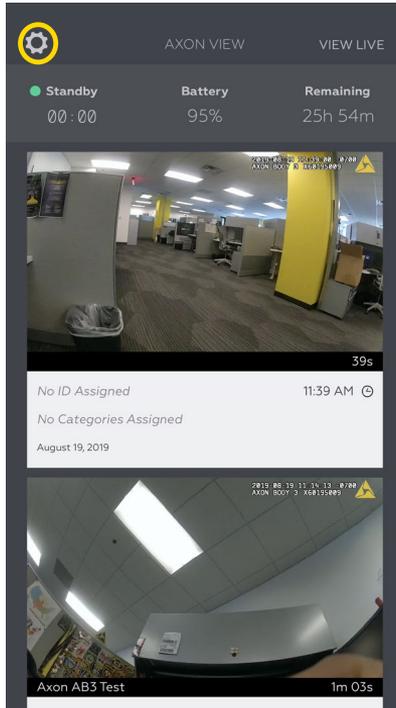

CAMERA

- Volume: 0 – 5
- Vibration: Enabled/Disabled
- Stealth Mode: Enabled/Disabled

LIGHTS

- Indicator Lights: Enabled/Disabled
- Top Brightness: Adjustable
- Front Brightness: Adjustable

TAP ON



ADJUST SETTINGS